
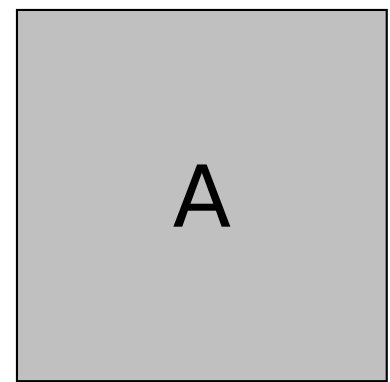
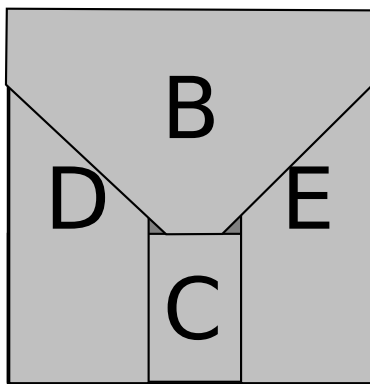


With the printed side (grey) facing you, all of the fold will be away (so the printed edge is on the outside of the fold).

Make the folds in the indicated order (in red, starting with 1), and proceed. Steps 4 and 5 can be done in either order, depending on your preference.

When you're done folding, turn it over (so 'A' is facing away from you). You'll see a point at the top. To insert a CD, unfold the two edges slightly (5) and slide the CD behind the two sides (D and E) all the way down. Then refold 5, and tuck the tip behind C.

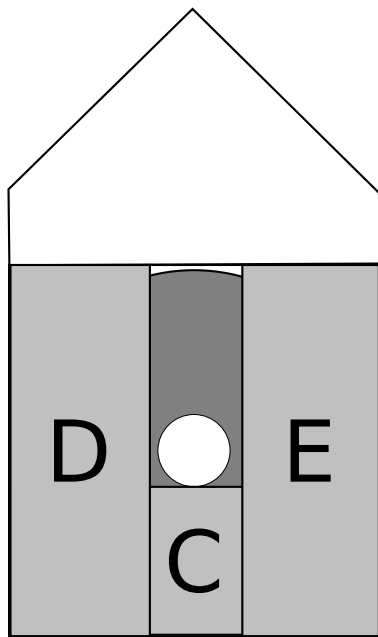

The completed Sleeve, when inserting a CD (left), when completely folded (middle) and the other side when completely folded (right).

You can see, A and B are always visible, and D and E are partially visible when folded, and always visible when open.